

Included in the package



--> Plastic Roof Spoiler

--> Double-sided mounting tape

! We highly recommend having your products installed by a specialist.

Installation

Resources
needed!



Pencil - Tape Measure - Masking Tape - Cloth



At least two people




Around 30 min

Cleaning

Clean the car's surface with cleaner and let it dry.

Marking


Fit the spoiler on the car to find where the edges of the roof spoiler will be (rough initial fitment). Then, place masking tape on the car around the edges of the spoiler to support the next step.

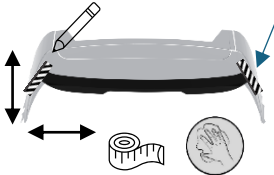

Measure and center the spoiler. Then, draw a pencil outline on the masking tape to indicate where the edges of the roof spoiler should be.

Centering

! The distance between the roof spoiler's edge and a reference point on your car (i.e. rear lights) should be equal for each side.

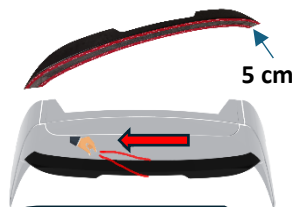

Remove 5cm (max) of foil from the edge of the double-sided mounting tape and place the roof spoiler back at the marked outline. Then, start removing the rest of the foil slowly while you hold the product tightly on the car.

Attaching

Vehicle Use

The vehicle is now ready to be used.