


Included in the package

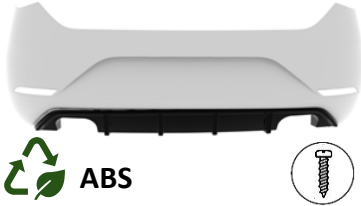

--> Rear Diffuser

--> 14 X Screws

We highly recommend having your products installed by a specialist.

## Installation

Resources  
needed!



Screwdriver - Gloves - Cloth



At least two people




Around 60 min

### Dismounting

Carefully, dismount the car's original diffuser.



### Centering

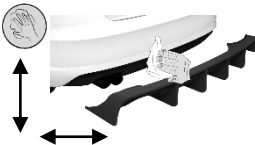

Center the Motordrome Design's diffuser at the car's rear bumper to find the right place for the product to be installed. Make sure that you match the diffuser to the bumper.

### Cleaning

Clean the car's surface and the diffuser with cleaner. Let the surfaces dry.




### Attaching



Carefully place the Motordrome Design's diffuser on the car and attach the screws to their contact points. Screw the bolts while holding the diffuser to the right place.

### Detailed attaching instructions

#### Top part of the product

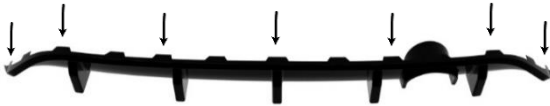

#### Bottom part of the product

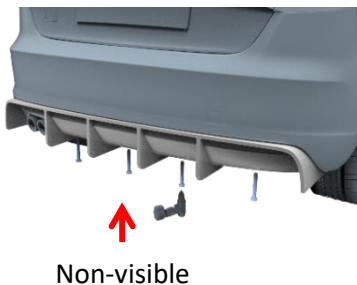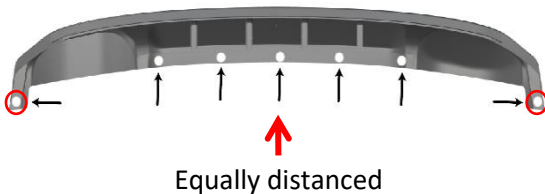

#### We recommend:

--> Using 6 - 8 screws at the top middle part of the product. The product has specific projections through which you should screw the bolts (note that not all projections need to be used).

--> Using 2 screws at the right and left bottom edges of the product.

--> Using 5 - 6 screws at the bottom middle part of the product. The screws should be equally distanced from each other.

--> Drill under and at a non-visible part of the car, as shown in the image.

**Vehicle Use**

The vehicle is now ready to be used.